
SOUND - Tennis Speaker

Tennis Ball Concepts

User Guide

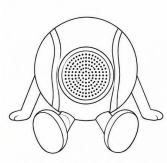

SPECIFICATIONS

Model	Ball Sound. Tennis Speaker
Connection	Bluetooth
Charging	USB-C Cable

Please read the following instructions before use.

INSTRUCTIONS:

- Press and hold the power button until the speaker turns ON
- Enable Bluetooth on your phone and select E09 from the available devices.
- Play audio from your device. Use the buttons on the back to adjust volume (+/-)
- Press and hold the power button until the speaker turns OFF.
- To charge, connect the USB-C Cable to a suitable USB power source. A full charge provides approximately 4 hours of playback.
- If pairing fails, check that the speaker is ON, Bluetooth is enabled, and the speaker is not connected to another device. Then try again.
- Place the speaker on a stable level surface.

CARE & SAFETY

- Keep the speaker away from water, excessive heat and open flame.
- Do not use the speaker or charging cable if damaged.
- Use a suitable USB power source for charging.
- Do not disassemble, puncture, or attempt to replace the internal battery.
- Clean with a soft, dry cloth. Do not immerse in water.

THANK YOU FOR CHOOSING BALL TIME

Questions or Support:
Email us to info@tennisballconcepts.com

Discover more:
Visit our website at www.tennisballconcepts.com

Follow us:

TennisBallConcepts

@tennis_ball_concepts